

Mitel 6757i with peoplefone



Freely programmable function keys P1 - P10
Default setting: Line



Fast-blinking LED = Incoming call

Steadily lit LED = In call

Slow-blinking LED = Call on hold



Other settings: BLF (Busy Lamp Field),
Speed Dial, Trasfer to

Call pick up

By pushing a LED key (P1 - P10) programmed as BLF or
[*] [8] + internal number of the ringing device.

Call transfer - Attended transfer

Put the call on hold with the **xfer** key, then dial the
number that you wish to transfer and press **Dial**.
If the third party wishes to accept the call, press **xfer**
again.

Call transfer - Blind transfer

Put the call on hold with the **xfer** key, then dial the
number that you wish to transfer and press **xfer** again
in order to immediatly transfer the call

Setup a Forwarding

Press the display key **CFwd** -> Choose which rule you want to
change -> Set a number to forward to -> Switch the status
to "On"

Disable a Forwarding


Same steps as above, except the status is set to
"Off".

This just deactivates it, for simple reactivation later.

Change the used Identity

User the left ◀ and right ▶ direction keys to cycle trough
the different identities of the phone

Reboot the phone

Open the Menu  and navigate the 6th Option
"Restart Phone"

CHist Call history (missed, received, dialed calls.
Last Call Redial the last call made or received
CFwd Shortcut to the callforward menu
Directory LDAP Directory



Redial



Menu



Hold / unhold call