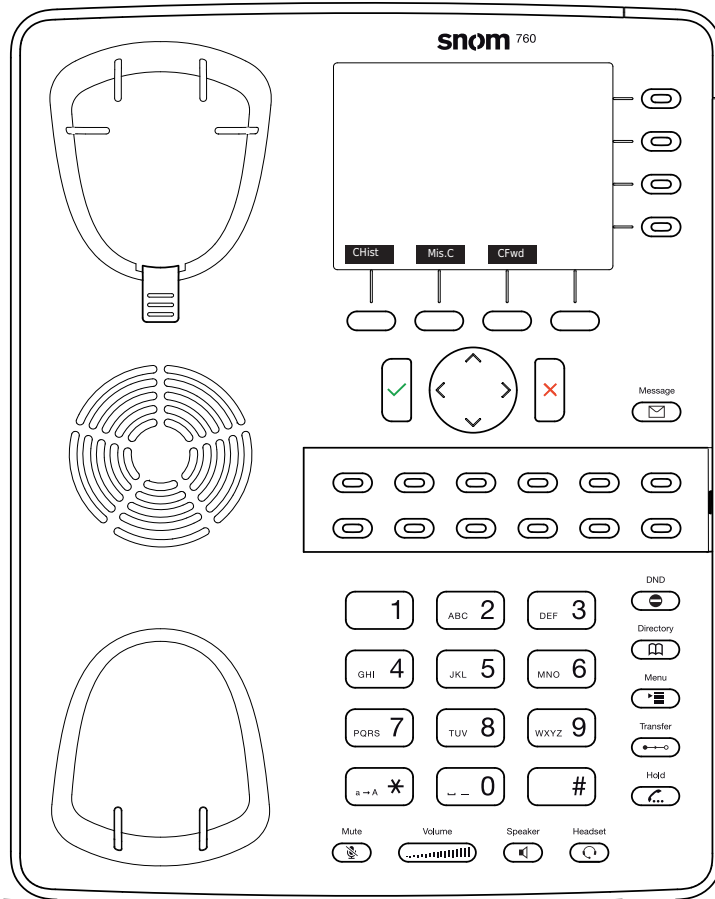 












Snom 760 D765 with peoplefone





-  **CHist** Call history (missed,received,dialed calls.
-  **Mis.C** Missed calls
-  **CFwd** Forwarding all calls (Turn on/off)
-  Listen to your voicemails or record a personal welcome message


 

-  Turn DND (do not disturb) on / off
-  Directory LDAP
-  Transfer call
-  Hold / unhold call
-  Menu

-  Freely programmable Display keys P1 - P16
Default setting: Line
Fast-blinking LED = Incoming call
Steadily lit LED = In call
Slow-blinking LED = Call on hold
Other settings: BLF (Busy Lamp Field),
Speed Dial, Trasfer to

Call pick up

By pushing a LED key (P1 - P15) programmed as BLF or   + internal number of the ringing device.


Call transfer - Attended transfer

Put the call on hold , then dial the number that you wish to transfer to. If the third party wished to accept the call press  and .

Call transfer - Blind transfer

While on the line, press  then dial the number that you wish to transfer to and press .

Setup a Forwarding

Press the Menu Key  -> Select "Call Features"
-> "Call Forwarding" -> Choose which rule you want to change -> Set a number to forward to -> Switch the status to "Enabled"

Disable a Forwarding

 
 
 
 
Same steps as above, except the status is set to "Disabled".

This just deactivates it, for simple reactivation later.

 
Change the used Identity

Use the left  and right  direction keys to cycle trough the different identities of the phone

Reboot the phone

Push the combination:    

Reset the Phone to factory defaults

Restart the phone and hold the  key while the phone is booting, then choose the option 1 "Settings Reset"