

Snom D745 with peoplefone



Freely programmable function keys P1 - P48

Default setting: Line

Fast-blinking LED = Incoming call

Steadily lit LED = In call

Slow-blinking LED = Call on hold

Other settings: BLF (Busy Lamp Field),

Speed Dial, Trasfer to

Call pick up

By pushing a LED key (P1 - P48) programmed as BLF or

+ internal number of the ringing device.

Call transfer - Attended transfer

Put the call on hold , then dial the number that you wish to transfer to. If the third party wished to accept the call press and .

Call transfer - Blind transfer

While on the line, press then dial the number that you wish to transfer to and press .

Setup a Forwarding

Press the Menu Key -> Select "Call Features"

-> "Call Forwarding" -> Choose which rule you want to change -> Set a number to forward to -> Switch the status to "Enabled"

Disable a Forwarding

Same steps as above, except the status is set to "Disabled".

This just deactivates it, for simple reactivation later.

Change the used Identity

 
 
 
Use the left and right direction keys to cycle trough the different identities of the phone

Reboot the phone

Push the combination:

Reset the Phone to factory defaults

Restart the phone and hold the key while the phone is booting, then choose the option 1 "Settings Reset"

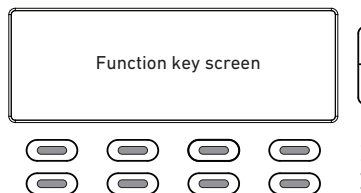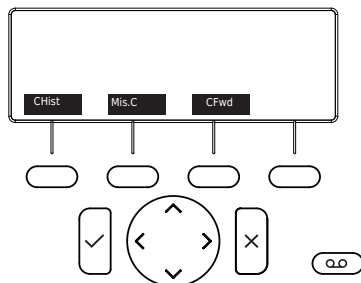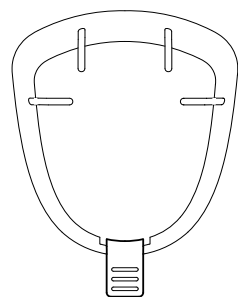

Call history (missed,received,dialed calls.

Missed calls

Forwarding all calls (Turn on/off)

Listen to your voicemails

or record a personal welcome message

Turn DND (do not disturb) on / off

Directory LDAP

Transfer call

Hold / unhold call

Menu