






-  Freely programmable LED keys P1 - P29
-  Default setting: Line
-  Other settings: Speed Dial, Transfer to, BLF (Busy Lamp Field)

Steadily lit Green = Available
 Steadily lit Red = Occupied
 Blinking Red = Incoming Call



History: Call history (missed, received, dialed calls)
Directory: LDAP and Local Phonebook
DND: Turn DND (do not disturb) on/off
Menu: Open the Phones Main Menu

Yealink T48S with peoplefone



Call pick up

By pushing a LED key (P1 - P29) programmed as BLF or  +  + internal number of the ringing device.

Call transfer - Attended transfer

Put the call on hold with the  key, then dial the number that you wish to transfer to. If the third party wishes to accept the call, press .

Call transfer - Blind transfer

While in the call, press  then dial the number that you wish to transfer to and press  again.



Setup a Forwarding

Press the Menu Key (Display 4) -> Select "Features" -> "Call Forward" -> Choose which rule you want to change -> Set a number to forward to -> Switch the status to "Enabled"



Disable a Forwarding

Same steps as above, except the status is set to "Disabled".
 This just deactivates it, for simple reactivation later.



Change the used Identity

Use the left  and right  direction keys to cycle through the different identities of the phone

Reboot the phone

Hold the  for several seconds and confirm by pressing 

Factory Reset

Hold the  key seconds and confirm by pressing  again